
 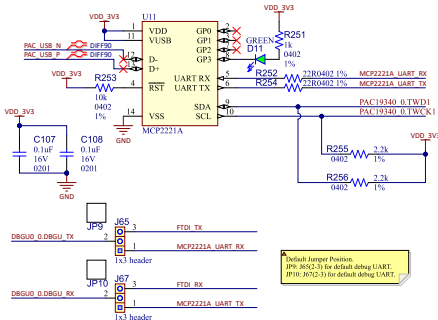
 
 



J66

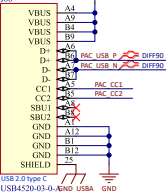

Default Jumper Position.
JP9: J65(2-3) for default debug UART.
JP10: J67(2-3) for default debug UART.