

Near Memory

Far Memory

SFRs

000000

003FFC

XRAM 8KB

004000

YRAM 8KB

006000

Near Memory
(Reserved)

008000

Far Memory
(Reserved)

010000

024000

Unused

DEBUGRAM

7BFE00

7BFFFC

Fuse Config/Cal Read,
Test, and Integrity Registers

7C0000

7C3000

FAR SFR Space

7CFFFF