

User Program Memory

Configuration Memory

0x7F2000

Calibration Memory Page
Cal, Die Serialization, FOTP

0x7F2FFC
0x7F3000

Configuration A Page

0x7F3FFC
0x7F4000

Configuration B Page

0x7F4FFC

Unimplemented
(Read '0's)

0x800000

User IVT
(Movable)

User Code Memory

0x81FFFFE