

SCK cycle (for reference)


SCK
(CPOL = 0)

SCK
(CPOL = 1)

MOSI
(from host)

MISO
(from client)

CS
(to client)

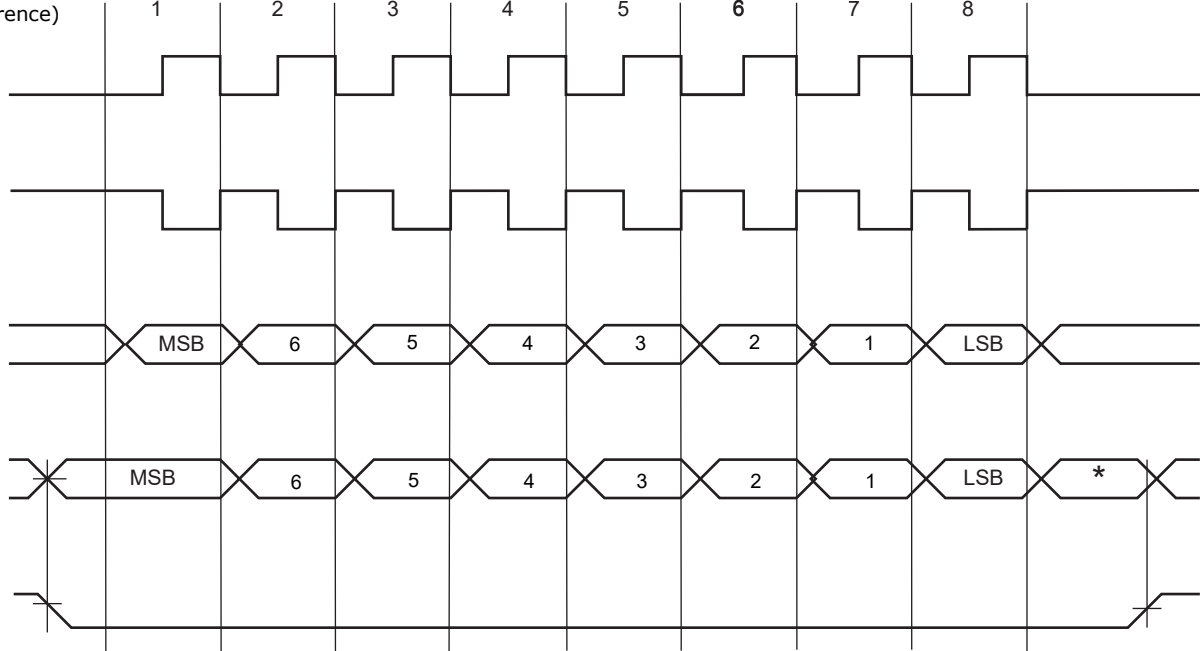

* Not defined.