

▶ Toolbar ⓘ

Easy View | Register Initialization ⓘ

▼ Hardware Settings

Error Percent

-0.04%

Enable USART Receiver

☒

?

Enable USART Transmitter

☒

?

IrDA Event Input Enable

☐

?