

Easy View

▼ Configuration Settings

Custom Name

Requested Baudrate 

Calculated Baudrate 

Baud Rate Error (%) 

Parity 

Data Size 

Stop Bits 

Flow Control Mode 

Redirect Printf to UART ☒ Ensure Redirect to Printf is enabled for only one UART driver.

▼ Interrupt Settings

Interrupt Driven ☐

▼ Dependency Selector

UART PLIB Selector 