PWM Channel y (y = 1 or 2) managed by external trigger External Trigger Mode: PWM_ETRG1.MODE = 3 (Cycle-by-Cycle Duty Mode) Recoverable management would have the same behavior with another external trigger mode

