

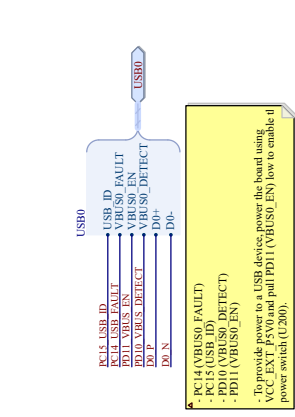



USB0 - Host / Device

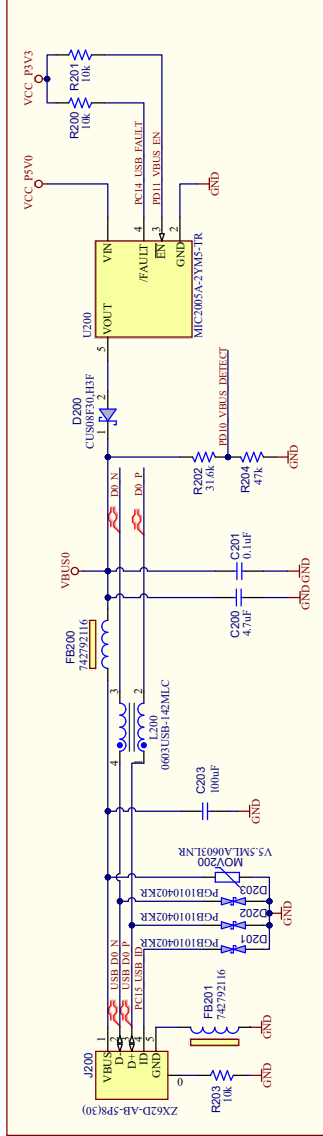

MCU Current Measurement

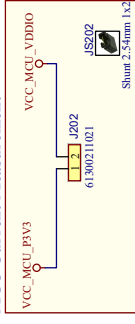

4 To measure the current drawn by the MCU, remove the jumper (JS202) and connect an ammeter in series.

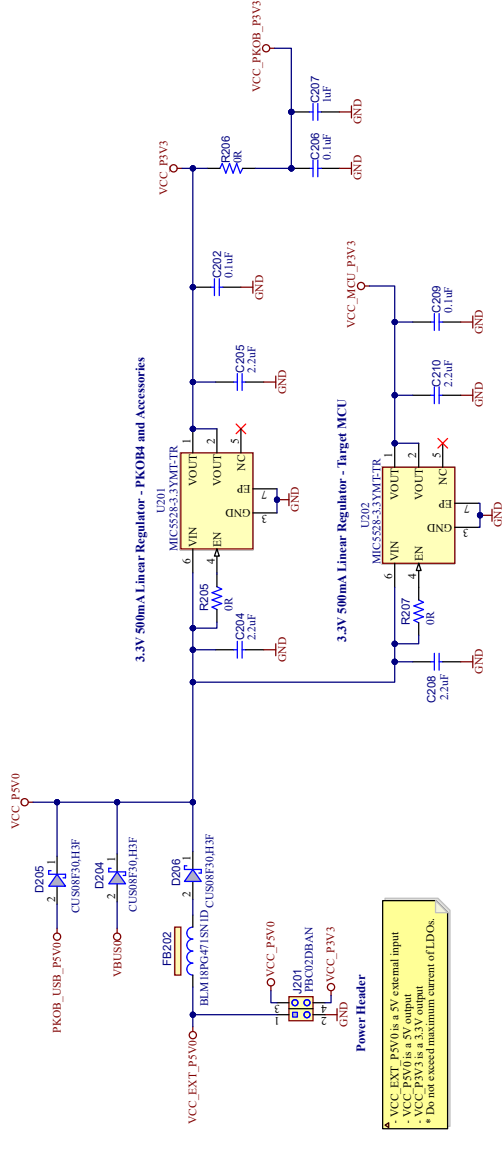

Power Header

- VCC_EXT_P5V0 is a 5V external input
 - VCC_P5V0 is a 5V output
 - VCC_P3V3 is a 3.3V output
- * Do not exceed maximum current of LDOs.