

▼ Hardware Settings

- ⓘ Select Mode: Dual and Single OPAMPs
- ⓘ Dual OPAMP Configuration: Differential Amplifier
- ⓘ Enable Single OPAMP:
- ⓘ Single OPAMP Configuration: Connected Directly to Pins
- ⓘ OPAMP Setup: Dual [OP0:OP1]; Single [OP2]