
SELECT OPO APPLICATIONS

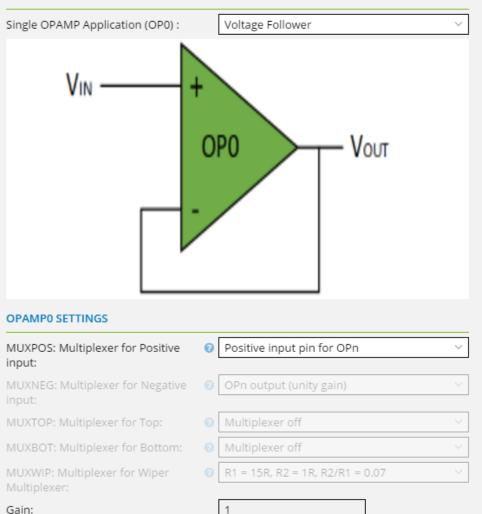

HARDWARE SETTINGS

Settle Time:

ALWAYSON: Always ON:

EVENTEN: Event Enable:

OUTMODE: Output Mode:

Output Driver in Normal Mode

RUNSTDBY: Run is standby mode:

RUNSTDBY: Run is standby mode:

0x7f

hex v