

Usage:

- type 'help' to print this menu
- type 'IXYZ' to set the lamp to a specific level (e.g. 1064 for 64%)
- type 'gs' to get the Gear Status
- type 'gl' to get the Gear actual Level
- type 'motion\_on' to turn on Motion sensor
- type 'motion\_off' to turn off Motion sensor
- type 'light\_on' to turn on Light sensor
- type 'light\_off' to turn off Light sensor
- type 'lte\_on' to enable LTE functionality and disable console control
  - warning: this will disable input, console control enabled via board reset

light\_on

Will turn on Light Sensor

Ambient Light is 433, LED Intensity is 89

Ambient Light is 464, LED Intensity is 88

light\_off

Will turn off Light Sensor mode