

- type 'lte_on' to enable LTE functionality and disable console control
- warning: this will disable input, console control enabled via board reset

lte_on

Will enable usage of LTE module and disable console input

Resetting LTE module...

RX:
LTE module still not ready to send data...

RX: +SYSSTART

TX: AT

RX: OK

TX: ATE0

RX: OK

TX: AT+SQNLED=1

RX: OK

TX: AT+CPSMS=0

RX: OK

TX: AT+CSQ

RX: +CSQ: 99,99 OK

TX: AT+CTZU=1

RX: OK

TX: AT+CTZR=1

RX: OK

TX: AT+CEREG=4

RX: OK

TX: AT+CFUN=1

RX: OK

TX: AT+CEREG?

RX: +CEREG: 4,0 OK

TX: AT+CEREG?

RX: +CEREG: 4,0 OK

TX: AT+CEREG?

RX: +CEREG: 4,0 OK +CEREG: 2