

User Memory Space

Configuration Memory Space

IVT	0x000000 0x0001FE 0x000200
Code Memory	0x0XXXFE 0x0XXX00
Device Configuration	0x0XXXFE 0x0XXX00
Unimplemented (Read '0's)	0x7FFFFE 0x800000
Executive Code Memory	0x800FFE 0x801000
Calibration ^(2,3) Data	0x8016FE 0x801700
OTP Memory	0x8017FE 0x801800
Reserved	0xF9FFFE 0xFA0000 0xFA0002 0xFA0004
Write Latches	0xFEFFFE 0xFF0000 0xFF0002 0xFF0004
Reserved	0xFFFFFE
DEVID	
Reserved	

(Note 4)