


Use microUSB port for External Supply
for development purpose and UART
communication.

PIM100

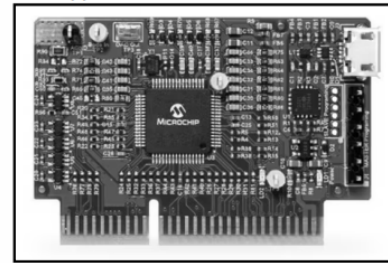

MA330048

DPSPIC33CK256MP506 DP-PIM

