

- **Notes:** 1. SRMTIF available only in Host mode.
 - 2. Clearing of interrupt flags is shown for illustration; actual interrupt flags must be cleared in software.
 - 3. SOSIF and EOSIF are set according to SS_in, even in Host mode.