

User Memory Space

GOTO Instruction	0x000000	(Note 4)
RESET Instruction	0x000002	
Interrupt Vector Table	0x000004 0x0001FE	
User Program Memory	0x000200	
Device Configuration	0x0XXXFE 0x0XXX00	
Unimplemented (Read '0's)	0x7FFFFE	
Executive Code Memory	0x800000 0x801000	
Calibration Data <sup>(2,3)</sup>	0x8016FE 0x801700	
OTP Memory	0x8017FE 0x801800	
Reserved	0xF9FFFE 0xFA0000	
Write Latches	0xFA0002 0xFA0004	
Reserved	0xFEFFFE 0xFF0000	
DEVID	0xFF0002 0xFF0004	
Reserved	0xFFFFFE	

Configuration Memory Space