

## Active Channels List

Channel Number	Trigger
DMAC Channel 0	SERCOM2_Transmit
DMAC Channel 1	SERCOM2_Receive

Add Channel

Remove Selected Channel

☐ Use Linked List Mode

## DMA Channel 0 Settings

Trigger Action (Cell Auto Start Enable)

One Cell Transfer Per DMA Start Trigger

Read Address Sequence

Incrementing Address+1 with Transfers of Byte Operands

Write Address Sequence

Fixed Byte Address (Single Byte Address with Enable Based u...

Cell Transfer Size

1

Channel Priority Level

Priority Level 1