



**bit 0 STCONV:** Start Conversion bit

Writing a '1' to this bit will start a single measurement. If in Free Running mode this will start the first conversion. STCONV will read as '1' as long as a conversion is in progress. When the conversion is complete, this bit is automatically cleared.