

```
loadsee-setup --setup -m1 -M C:\Microsemi\SEE\U-HSMsee-edg.sar -U C:\Microsemi\SEE\userdata.sar -p  
g4cusee --force
```

Module #1 has an existing configuration:

Module #1:

```
Machine file:          C:\Microsemi\SEE\U-HSMsee-edg.sar  
Encryption key:  
Signing key hash:  
Userdata file:        C:\Microsemi\SEE\userdata.sar  
WorldID published object: g4cusee  
Postload helper:  
Postload args:
```

Erase this configuration? (yes/no): **yes**

Module #1 new SEE configuration saved, new configuration follows:

Module #1:

```
Machine file:          C:\Microsemi\SEE\U-HSMsee-edg.sar  
Encryption key:  
Signing key hash:  
Userdata file:        C:\Microsemi\SEE\userdata.sar  
WorldID published object: g4cusee  
Postload helper:  
Postload args:
```