

```
C:\Microsemi\Server>U-HSMServer.exe
```

```
The service is running.
```

```
Info: Ticket cleanup service is running.
```

```
Initializing session...
```

```
Waiting for the SEE firmware to load...
```

```
Session is initialized.
```

```
Press <ENTER> to exit.
```