

```
C:\Microsemi\Tools>C:\Microsemi\Utils\GetLoadingSEEName.bat
```

```
WorldID = 'g4cmsee'
```

```
    -MemAllocUser          933888
```

```
If MemAllocUser is 0, SEE is not loaded
```