

EVENT CONFIGURATOR

Channel Configuration

Channel Number	Event Generator	Event Status	User Ready	Remove Channel
Channel 0	TC0_OVF ▾	●	●	

Add Channel

User Configuration

User	Channel Number	Remove User
ADC0_START ▾	CHANNEL_0 ▾	

Add User

Channel 0 Settings

Path Selection

ASYNCHRONOUS ▾

Event Edge Selection

NO_EVT_OUTPUT ▾

Generic Clock On Demand

☐

Run In Standby Sleep Mode

☐

Enable Event Detection Interrupt

Enable Overrun Interrupt