Active Channels List Channel Number Trigger DMAC Channel 0 ADCO RESRDY V Add Channel Remove Selected Channel

DMA Channel 0 Settings

Enable Interrupt

Trigger Action

Beat Size

Source Address Mode

Destination Address Mode

Use Linked List Mode







16-bit bus transfer





Increment Address After Every Transfer











V