

MPLAB X IDE v6.30 - avr32la32_cnano_getting_started: default

File Edit View Navigate Source Refactor Production Debug Team Tools Window Help

default

PC: 0x0ithsvnzc

Search (Ctrl+I)

Projects

avr32la32_cnano_getting_started

Header Files

Important Files

Linker Files

Source Files

main.c

MCC Generated Files

system

timer

uart

Libraries

Loadables

Start Page

Kit Window

MCC

Generate

Content Manager

Project Resources

MCC v5.7.0

Drivers

Timer

TCB0

UART

UART0

System

CLKCTRL

Configuration Bits

Interrupt Manager

Main

Pins

Pin Package View

Application Builder

Layouts

Zoom

Info

Settings

Save Image

Legends

Pin Package View

Application Builder

Layouts

Zoom

Info

Settings

Save Image

Legends

Main

UART0

USART0_Peripheral

TCB0

System

CLKCTRL

Interrupt Manager

Configuration Bits

Pins

AVR32LA32

MICROCHIP

AVR32LA32

AC	1	ADC	1	BOD	1	CCL
CPU	1	CRCSCAN	1	EVSYS	1	NVMCTRL
RSTCTRL	1	RTC	1	SLPCTRL	1	SPI
SYSCFG	1	TCB	2	TCE	1	TWI
USART	1	VREF	1	WDT	1	

User Output

Notifications

Pin Grid View

Search Results

Output

6