



Read SEQ0 & SEQ1

Compare SEQ0 & SEQ1

SEQ0 = SEQ1 ≠ 0xFFFFFFFF

BOOTCFG1 Fuse Set Selected

BOOTCFG1A Fuse Set Selected

SEQ0 = SEQ1 = 0xFFFFFFFF

BootROM uses default fuse for BOOTCFG

Fuse Integrity Check on Selected Fuse

FAIL

PASS

Device in Interactive Mode

BootROM continues remaining operations