

User Memory Space

Configuration Memory Space

IVT	0x000000
Code Memory	0x0001FE
	0x000200
Device Configuration	0x057EFE
	0x057F00
Unimplemented (Read '0's)	0x057FFE
	0x0XXX00
Executive Code Memory	0x7FFFFFFE
	0x800000
Calibration <sup>(2,3)</sup> Data	0x800FFE
	0x801000
OTP Memory	0x8016FE
	0x801700
Reserved	0x8017FE
	0x801800
Write Latches	0xF9FFFE
	0xFA0000
Reserved	0xFA0002
	0xFA0004
DEVID	0xFEFFFE
	0xFF0000
Reserved	0xFF0002
	0xFF0004
	0xFFFFFE

(Note 4)