



Read Boot Configuration in Fuse

DISABLE_BSCR flag set

Yes

Boot sequence uses fuse configuration

No

Read BSC_CR

BUREG_VALID bit set

No

Boot sequence uses fuse configuration

Yes

Read the two BSCR LSB to know which BUREG to use

Boot sequence uses BUREG configuration