

JTAG or SPI Slave UJTAG is enabled.  
JTAG (1149.1) boundary scan is enabled.  
JTAG or SPI Slave reading of temperature and voltage sensor is enabled.

**Microsemi Factory Access**

Allow Microsemi factory test mode access. This is required to perform Failure Analysis on the device.

**JTAG/SPI Slave User Commands Policy**

PUF emulation is available.  
External Fabric/sNVM design digest check requests through JTAG and SPI Slave are available.  
External zeroization through JTAG/SPI Slave is available.

**Security key mode**

- Bitstream encryption with default key       Custom security options

User keys

PUF emulation is available by default

 Disable all external access to PUF emulation

Update policy

External Fabric/sNVM digest requests JTAG/SPI Slave are available by default

 Disable external Fabric/sNVM digest requests through JTAG/SPI Slave

Debug policy

External zeroization through JTAG/SPI Slave is available by default

 Disable external zeroization through JTAG/SPI SlaveMicrosemi  
factory  
access

Reset to default

JTAG/SPI Slave  
commands  
policy

Help

Save Summary to File...

Back

Next

Finish

Cancel