

Initialize the system

Start the ADC
conversion

NO

Is conversion
done?

YES

Start new conversion

Send the ADC result