

Serial configuration

Port	Active
COM8 (115200, None, 8, One)	True
COM6 (115200, None, 8, One)	False
COM20 (115200, None, 8, One)	False
PCAN_USB:FD 1	

Activate

Deactivate

Serial port PCAN_USB:FD 1 (51h) ▼

Module name Universal Module ▼

Mapping between

Serial/PCAN port
COM8

Add

Remove

Ok

Close

Close