



 **Default Jumper Position.**
JP9: J65(2-3) for default debug UART.
JP10: J67(2-3) for default debug UART.