



Run all available test cases at room temperature

Set climate chamber at 0°C

Run all test cases

Continuously monitor results

Tested at 70°C?

Yes

Stop testing cycle

No

Increment testing temperature by 10°C