



Configuration Options

- RTC Count Sync Enable ☒
- Tamper Detection Configuration
 - Enable Tamper Detection Interrupt ☒
 - Erase General Purpose Registers on Tamper Detection ☐
 - Active Layer Prescaler
 - Debounce Prescaler
 - Enable Tamper DMA Request ☐
 - Enable RTC Active layer Output ☐
 - Debounce Operation Mode
 - Debouncer Value Matching
 - Tamper Channel 0 Configuration
 - Tamper Channel 1 Configuration
 - Tamper Channel 2 Configuration
 - Tamper Channel 3 Configuration
 - Tamper Channel 4 Configuration
 - Tamper Channel 5 Configuration
 - Tamper Channel 6 Configuration
 - Tamper Channel 7 Configuration
- Event System Configuration
 - Enable Tamper Event Output ☒
 - Enable Tamper Event Input ☒
- RTC Operation Mode
 - RTC MODE 0 Configuration
 - Enable Interrupts ? ☒
 - Periodic Interval 0 Interrupt Enable ☐
 - Periodic Interval 1 Interrupt Enable ☐
 - Periodic Interval 2 Interrupt Enable ☐
 - Periodic Interval 3 Interrupt Enable ☐
 - Periodic Interval 4 Interrupt Enable ☐
 - Periodic Interval 5 Interrupt Enable ☐
 - Periodic Interval 6 Interrupt Enable ☐
 - Periodic Interval 7 Interrupt Enable ☐
 - Compare 0 Interrupt Enable ☒
 - Overflow Interrupt Enable ☐
 - RTC Prescaler
 - Compare Value
 - Clear on compare Match ☒
- RTC EVENTS configuration