

EVENT CONFIGURATOR

Channel Configuration

Channel Number	Event Generator	Security Mode	Event Status	User Ready	Remove Channel
Channel 0	EIC_EXTINT_2 ▾	SECURE ▾	●	●	

Add Channel

User Configuration

User	Channel Number	Security Mode	Remove User
RTC_TAMPER ▾	CHANNEL_0 ▾	SECURE ▾	

Add User

Channel 0 Settings

Path Selection

ASYNCHRONOUS ▾

Event Edge Selection

NO_EVT_OUTPUT ▾

Generic Clock On Demand

☐

Run In Standby Sleep Mode

☐

Enable Event Detection Interrupt

Enable Overrun Interrupt