



Note: MDIV should always be different from 0 when using DDR memories. If MDIV must be set to 0, first switch the DDR memories to Self-refresh mode and disable DDRCLK.