




12V Flyback Converter

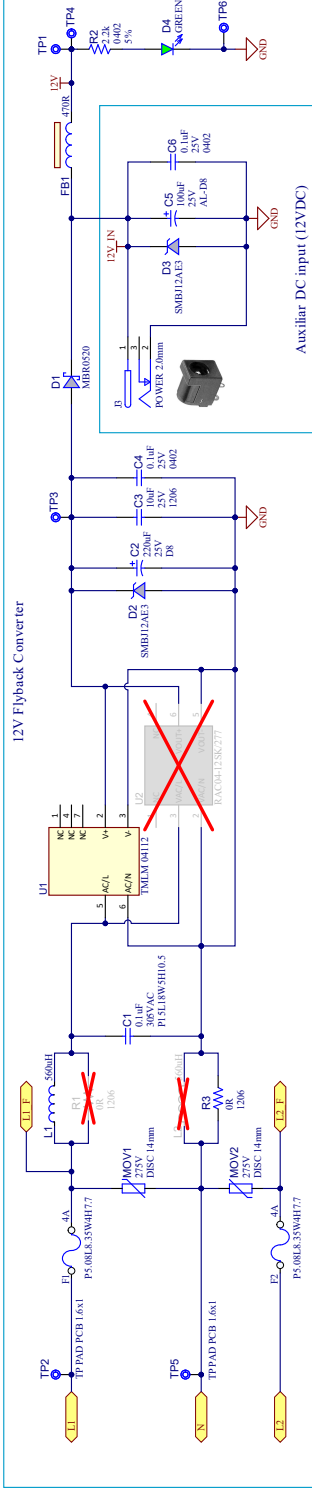


Auxiliar DC input (12VDC)

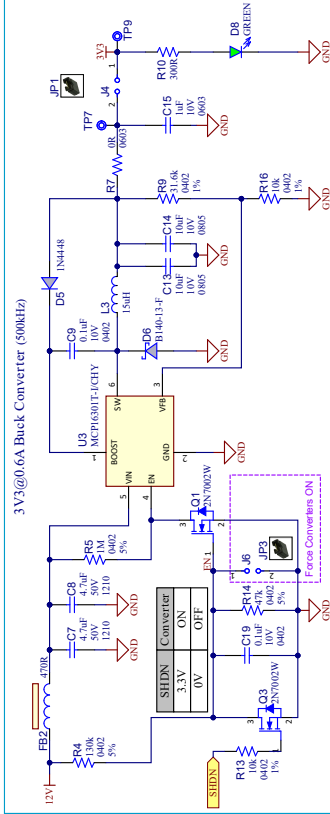


5V@1.5A Buck Converter (14MHz)

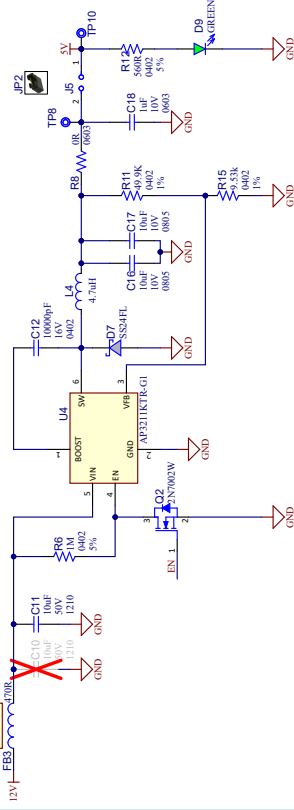

Note: See DS51978 User's Guide for more information about 3V3 converter.

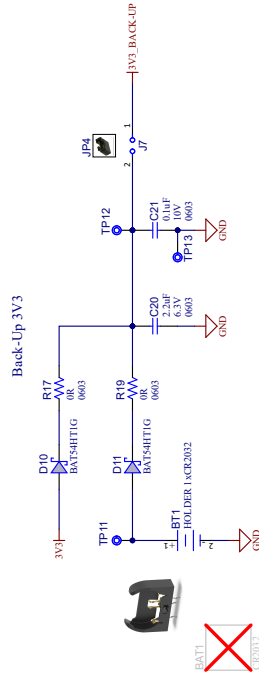

Back-Up 3V3

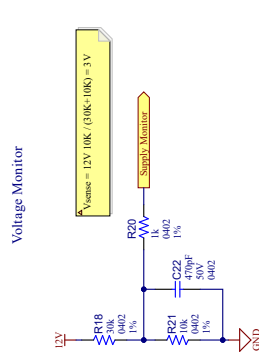

Voltage Monitor