



Core

- Generate Harmony Application Files ☐
- Generate Harmony Driver Common Files ☐
- Generate Harmony System Service Common Files ☐
- Generate Harmony System Media Files ☐
- Enable System Interrupt ☐
- Enable System Ports ☐
- Enable System Cache ☒
- Enable System DMA ☐
- Enable System Reset ☐
- Enable OSAL ☐