

USART

☒ Use USART Driver?

Driver Implementation

☒ Interrupt Mode

☐ Byte Model Support

☐ Read\Write Model Support

☒ Buffer Queue Support

Number of USART Driver Instances

**** Each instance can have only one client in STATIC driver mode ****

Number of USART Driver Clients

☒ USART Driver Instance 0

USART Module ID

Baud Rate

Transmit Interrupt Priority

Transmit Interrupt Sub-priority

Receive Interrupt Priority

Receive Interrupt Sub-priority

Operation Mode

☐ Wake On Start

☐ Auto Baud

☐ Stop In Idle

Line Control

Handshake Mode

Transmit Queue Size

Receive Queue Size

☐ Transmit DMA Support

☐ Receive DMA Support