



Enable the endpoint.

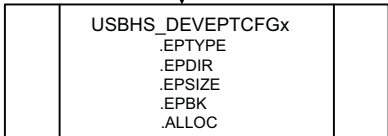

Configure the endpoint:

- type
- direction
- size
- number of banks

 Allocate the configured DPRAM banks.



Test if the endpoint configuration is correct.

