

```
loadsee-setup -m 1 -s -p g4cmsee -M C:\Microsemi\SEE\M-HSMsee-edg.sar -U  
C:\Microsemi\SEE\userdata.sar
```

Module #1 has an existing configuration:

Module #1:

```
Machine file:                C:\Microsemi\SEE\M-HSMsee-edg.sar  
Encryption key:  
Signing key hash:  
Userdata file:              C:\Microsemi\SEE\userdata.sar  
WorldID published object: g4cmsee  
Postload helper:  
Postload args:
```

Erase this configuration? (yes/no): **yes**

Module #1 new SEE configuration saved, new configuration follows:

Module #1:

```
Machine file:                C:\Microsemi\SEE\M-HSMsee-edg.sar  
Encryption key:  
Signing key hash:  
Userdata file:              C:\Microsemi\SEE\userdata.sar  
WorldID published object: g4cmsee  
Postload helper:  
Postload args:
```