

UART Bootloader	
Bootloader Peripheral Used	SERCOM2_USART
Bootloader NVM Memory Used	NVMCTRL
Bootloader Size (Bytes)	8192
<input checked="" type="checkbox"/> Enable Bootloader Trigger From Firmware	<input checked="" type="checkbox"/>
Number Of Bytes To Reserve From Start Of RAM	16
Enable Fuse Programming	<input type="checkbox"/>
Enable Watchdog Refresh If Enabled Through FUSE	<input type="checkbox"/>
<input checked="" type="checkbox"/> Use Dual Bank For Safe Flash Update	<input checked="" type="checkbox"/>
!!! WARNING Only Half of the Flash memory will be available for Application !!!	

