

```
C:\Users\>python D:\bootloader\tools\bt1_host.py --help
Usage: bt1_host.py [options]
```

Options:

- h, --help show this help message and exit
- v, --verbose enable verbose output
- r BAUD, --baud=BAUD UART baudrate
- u PARITY, --parity=PARITY
UART Parity (none/even/odd)
- t, --tune auto-tune UART baudrate
- i PATH, --interface=PATH
communication interface
- f FILE, --file=FILE binary file to program
- c DEVCFGFILE, --devcfgfile=DEVCFGFILE
device configuration text file
- a ADDR, --address=ADDR
destination address
- p SectSize, --sectorSize=SectSize
Device Sector Size in Bytes
- b, --boot enable write to the bootloader area
- s, --swap swap banks after programming
- d DEV, --device=DEV target device (samc2x/samd1x/samd2x/samd5x/samda1/same7x/same5x/samg5x/saml2x/samha1/sama5/sama7/sam9x6/sam9x7/pic32cz/pic32mk/pic32mx/pic32mz/pic32mzw/pic32cm/pic32mm/wbz451/pic32cxbz2/wbz45x)