

Read and load Inactive panel BTSEQ number into Ws  
(may occur at any point prior to BOOTSWP execution)

Validate BTSEQ value in Ws

BOOTSWP enabled and qualified, so pulse bootswap

BOOTSWP enabled and qualified, so set SR.Z=1

