


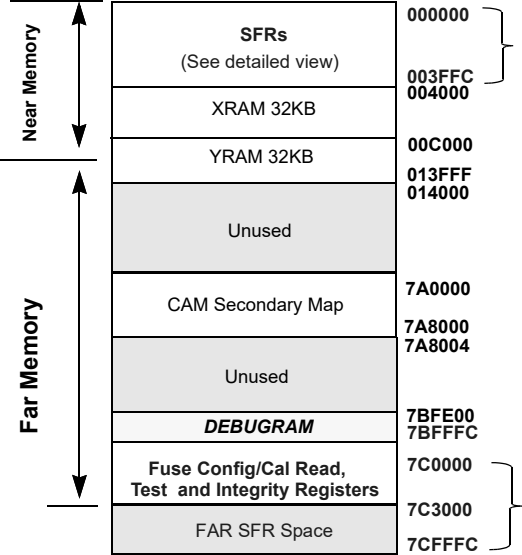

Near Memory

Far Memory

SFRs

(See detailed view)

000000

003FFC

004000

XRAM 32KB

YRAM 32KB

00C000

013FFF

014000

Unused

CAM Secondary Map

7A0000

7A8000

7A8004

Unused

DEBUGRAM

7BFE00

7BFFFC

**Fuse Config/Cal Read,
Test and Integrity Registers**

7C0000

7C3000

FAR SFR Space

7CFFFC