

Calibration Memory	7F2000
User OTP	7F2C00
Configuration A Active Page	7F3000
Configuration B Page	7F4000
Reserved	7F5000
Configuration A Inactive Page	7FB000
Reserved	7FC000
256 KB Code Memory (64 K Instructions)	800000
	83FFFC
Unused	
Reserved for Inactive Panel	C00000

256 KB Single Boot

Calibration Memory	7F2000
User OTP	7F2C00
Configuration A Active Page	7F3000
Configuration B Page	7F4000
Reserved	7F5000
Configuration A Inactive Page	7FB000
Reserved	7FC000
512 KB Code Memory (128 K Instructions)	800000
	87FFFC
Unused	
Reserved for Inactive Panel	C00000

512 KB Single Boot

Calibration Memory	7F2000
User OTP	7F2C00
Configuration A Active Page	7F3000
Configuration B Page	7F4000
Reserved	7F5000
Configuration A Inactive Page	7FB000
Reserved	7FC000
Active Panel 128 KB Code Memory (32 K Instructions)	800000
	81FFFC
Unused	
Inactive Panel 128 KB Code Memory (32 K Instructions)	C00000
	C1FFFC

256 KB Dual Boot

Calibration Memory	7F2000
User OTP	7F2C00
Configuration A Active Page	7F3000
Configuration B Page	7F4000
Reserved	7F5000
Configuration A Inactive Page	7FB000
Reserved	7FC000
Active Panel 256 KB Code Memory (64 K Instructions)	800000
	83FFFC
Unused	
Inactive Panel 256 KB Code Memory (64 K Instructions)	C00000
	C3FFFC

512 KB Dual Boot