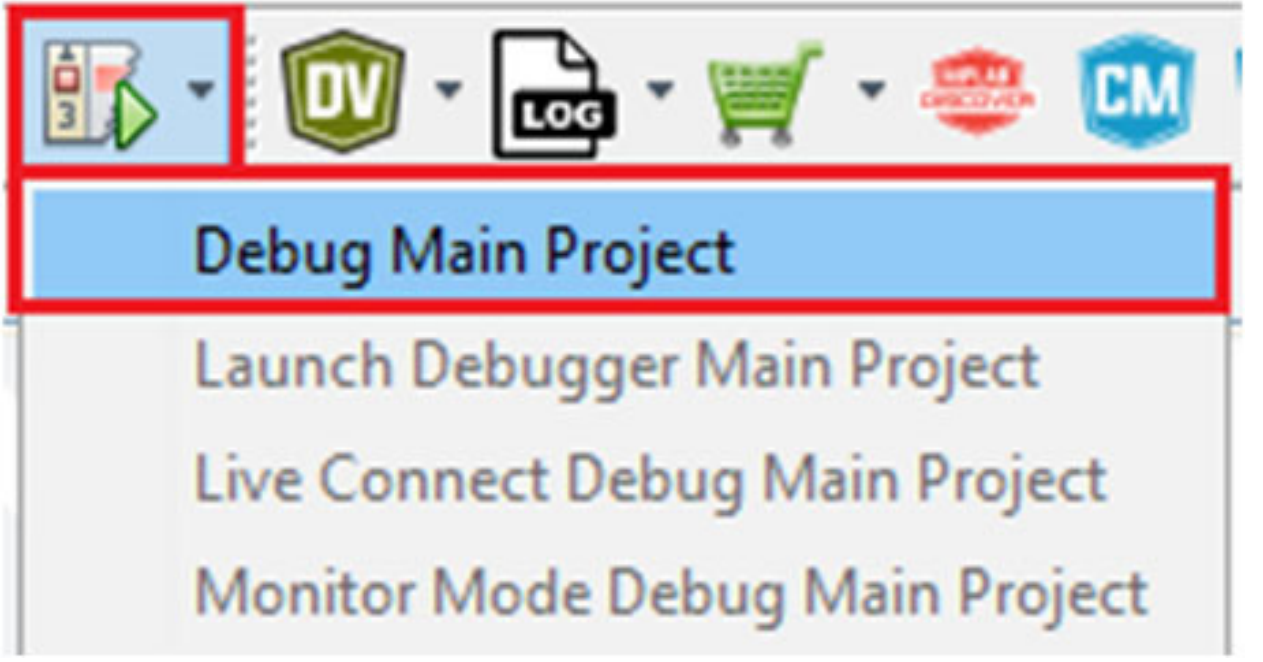
DV
LOG
CM
Debug Main Project
Launch Debugger Main Project
Live Connect Debug Main Project
Monitor Mode Debug Main Project