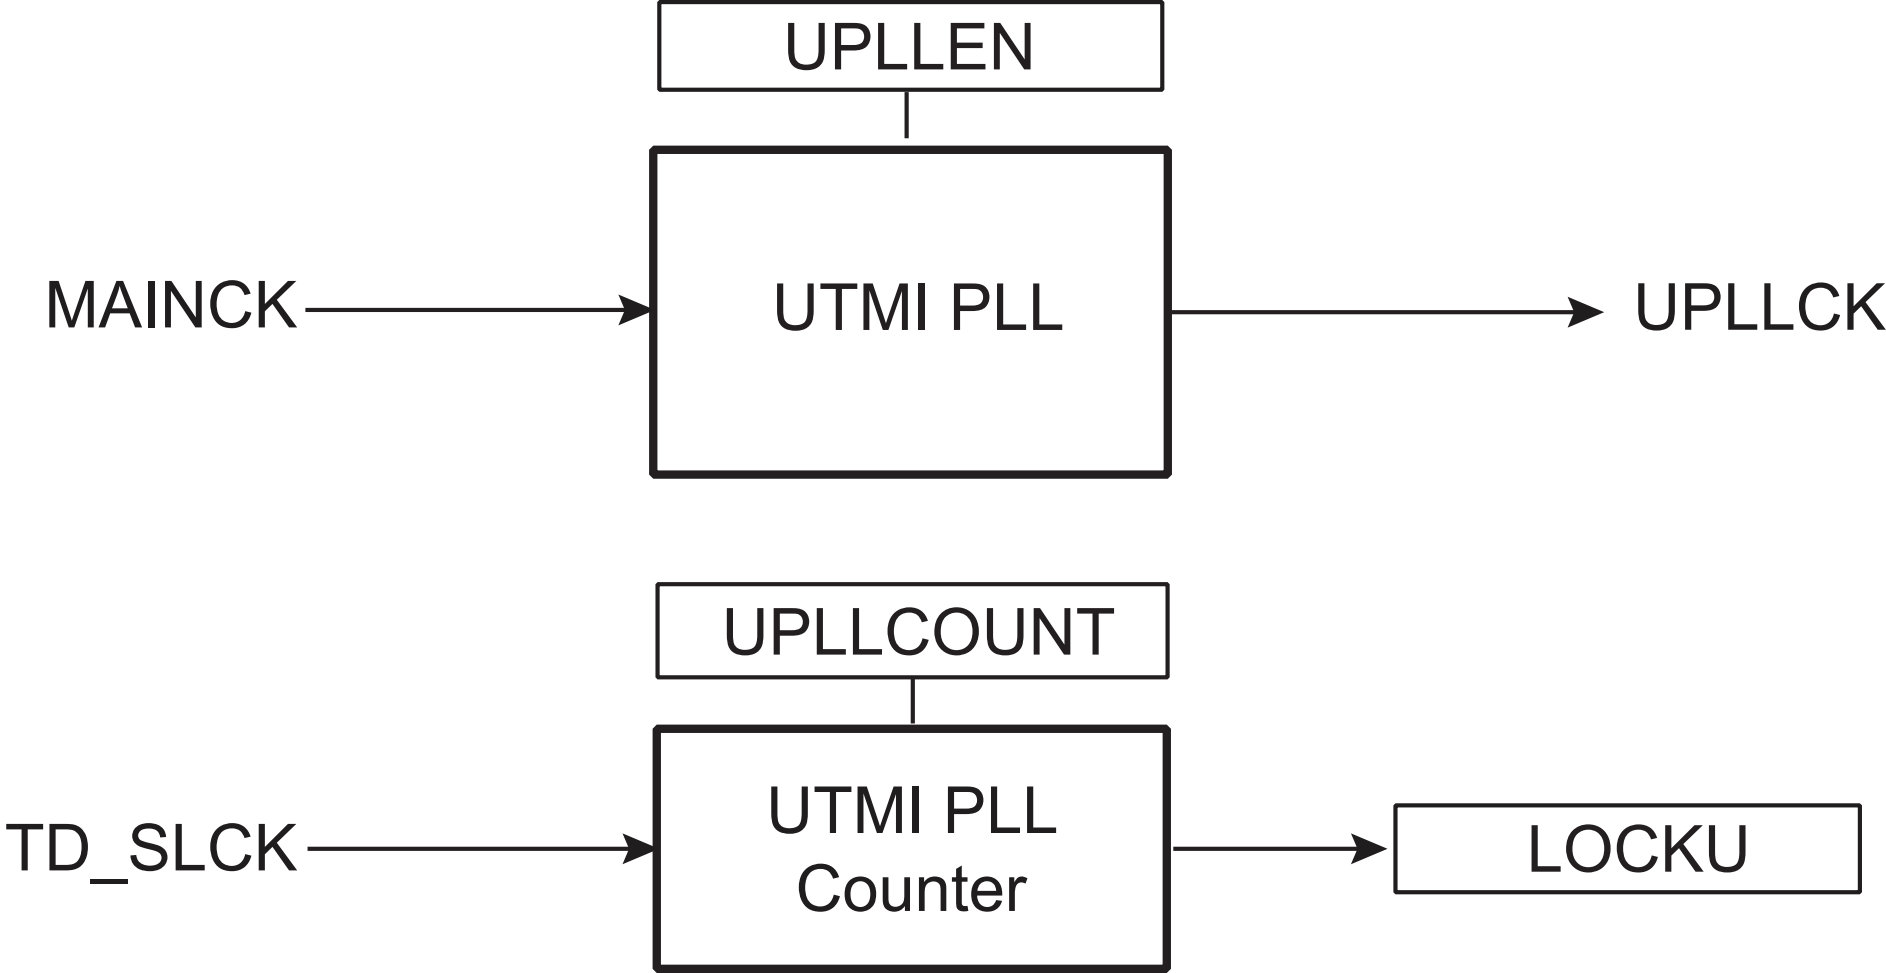
UPLLEN
MAINCK
UTMI PLL
UPLLCK
UPLLCOUNT
TD_SLCK
UTMI PLL
Counter
LOCKU