


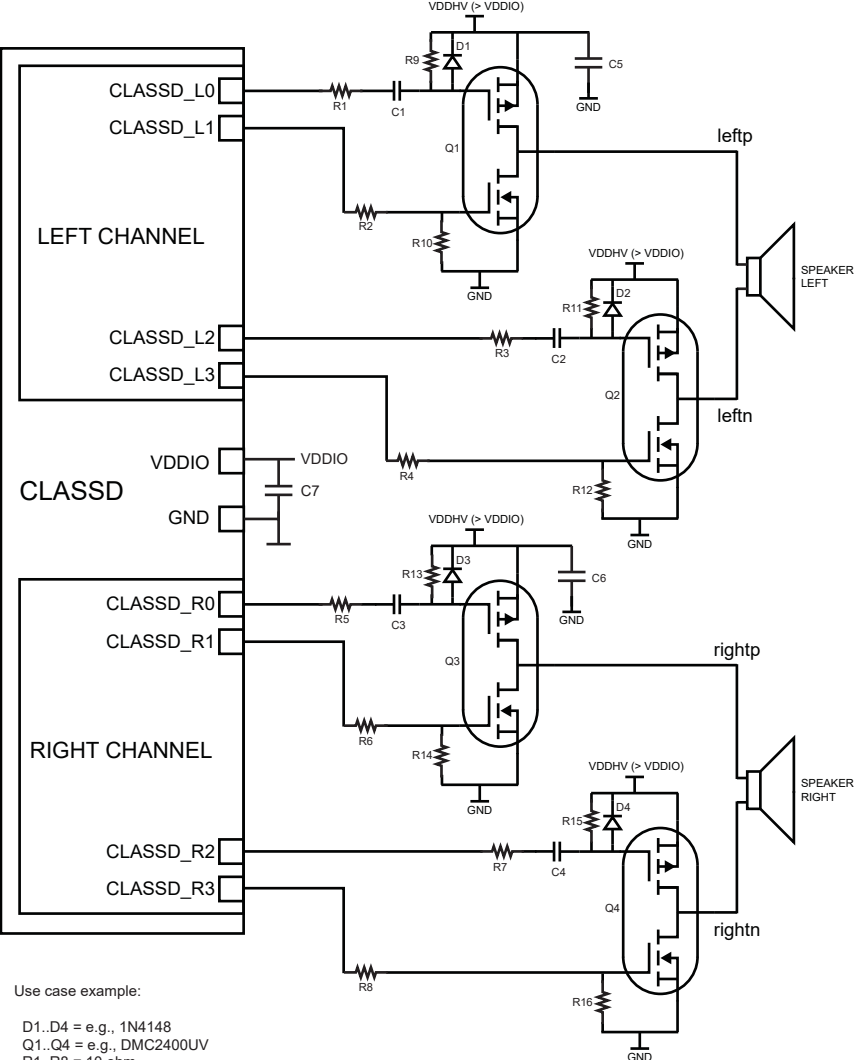

Use case example:

D1..D4 = e.g., 1N4148
 Q1..Q4 = e.g., DMC2400UV
 R1..R8 = 10 ohm
 R9..R16 = 10 kohm
 C1..C4 = 10 nF
 C5..C6 = 10 µF
 C7 = 1 µF